

Audio System (without navigation system)

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

Basic operation



- 1 Power/Volume
- 2 Audio sources
- 3 Sound quality modes
Listening position
ASL (Automatic Sound Levelizer)

Audio sources

AM·SAT: AM radio/Satellite radio*

FM: FM radio

DISC·AUX: CD player/Auxiliary audio device

*: The optional Lexus genuine satellite tuner and antenna allows you to receive and play XM[®] satellite radio broadcasts. (Subscription is required. For detailed information, see the Owner's Manual.)

Radio



- 1 Scan
All radio stations: press
Preset radio stations: press and hold
- 2 Station presets
- 3 Text messages
- 4 Traffic information
- 5 Tune
- 6 RDS genre select
- 7 Seek

Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1~6) until you hear a beep, indicating that the station is set.

CD player

Playing an audio CD



- 1 Eject
- 2 CD load
- 3 Text information
- 4 CD select
- 5 Repeat
 - Current track: press
 - Current CD: press and hold
- 6 Track select/reverse/fast-forward
- 7 Random playback
 - Current CD: press
 - All CDs: press and hold
- 8 Scan
 - All tracks in current CD: press
 - First track of each CD: press and hold

Playing a CD with MP3/WMA files



- 1 Eject
- 2 CD load
- 3 Text information
- 4 Folder select
- 5 File select
- 6 CD select
- 7 Repeat
 - Current file: press
 - Current folders: press and hold
- 8 File select/reverse/fast-forward
- 9 Random playback
 - Current folder: press
 - Current CD: press and hold
- 10 Scan
 - All files in current folder: press
 - First file of each folder: press and hold



■ Loading a CD

- 1 Press the LOAD button.
WAIT is shown on the display.
- 2 Insert a CD when the indicator on the slot turns from amber to green.
The display changes from WAIT to LOAD.

■ Loading multiple CDs

- 1 Press and hold the LOAD button until you hear a beep.
WAIT is shown on the display.
- 2 Insert a CD when the indicator on the slot turns from amber to green.
The display changes from WAIT to LOAD.
The indicator on the slot turns to amber when the CD is inserted.
- 3 Insert the next CD when the indicator on the slot turns from amber to green again.
Repeat the procedure for the remaining CDs.
To stop the operation, press the DISC·AUX button.

■ Remote control (steering wheel switches)


The audio system can be operated using the remote control located on the steering wheel.



- 1 Power on/change mode: press
Power off: press and hold
- 2 Volume
- 3 Audio source
Radio: radio tuner
CD: disc/track/file (MP3/WMA) select

Air Conditioning System (without navigation system)

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

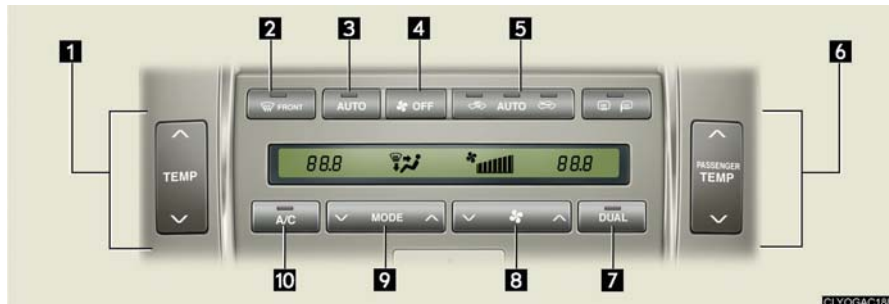

- | | |
|--|--------------------------------------|
| 1 Driver side temperature control | 6 Passenger side temperature control |
| 2 Windshield defog/defrost | 7 Dual mode switch |
| 3 Switch to automatic mode | 8 Fan speed controls |
| 4 OFF button | 9 Air flow controls |
| 5 Outside air/recirculated air mode switch | 10 A/C switch |

■ Using the automatic mode



- 1 Press the AUTO button.
- 2 Adjust the temperature using the TEMP button.

■ Adjusting the temperature in DUAL mode




In DUAL mode, driver and passenger side temperature settings can be adjusted separately.

Press the PASSENGER TEMP button to adjust the temperature for the passenger side.

To cancel the DUAL mode, press the DUAL button.

Ashtrays

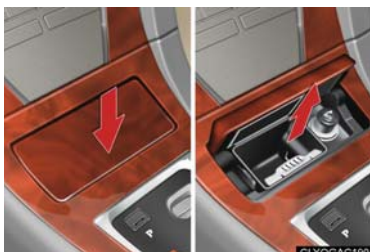

To remove the ashtray, push the back part of the lid and pull the ashtray upwards.

Glove Box



- 1 Open: press the button.
- 2 Lock
- 3 Unlock

The glove box can be locked and unlocked using the mechanical key.

Auxiliary Box



To open, press down the knob.

Console Boxes



► Front

To open, press the button.

To close, pull up the lever.



► Overhead console box

To open, press the lid.

There is a power outlet located in the front console box.



Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus

Cup Holders



► Front


To open, press down on the front of the lid.



► Rear

To open, pull up the knob.

Interior Lights

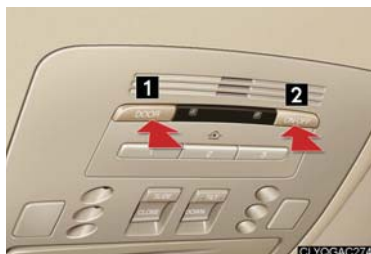

1 Door position ON/OFF

2 ON/OFF

Compass



To display the compass, press and hold the AUTO button for 3 or more seconds.

To cancel the display, press and hold the AUTO button again for 3 or more seconds.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus


Seat Heaters and Ventilators (If Equipped)



Seat heaters: turn the dial toward **1**.

Ventilators: turn the dial toward **2**.

Rear Sunshade (If Equipped)

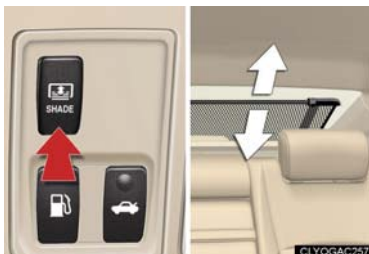

To raise the rear sunshade, press the switch.
Press the switch again to lower it.


The sunshade automatically lowers to ensure visibility when reversing.

Extended Trunk

Longer items can be loaded in the vehicle by utilizing the trunk space and rear seat area.



- 1 Pull down the rear armrest.

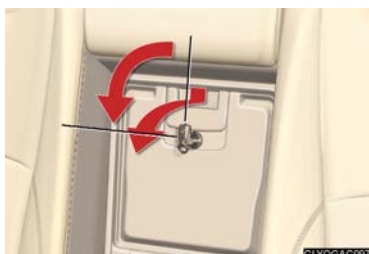

- 2 Unlock the armrest door using the mechanical key.

Luggage Mat



Pull the lever upwards when lifting the luggage mat up.



The lever can be hooked on the edge of the trunk.